


Model No.: THZ678

1/4" Pneumatic Mini Die Grinder

AURORA

TOOLS

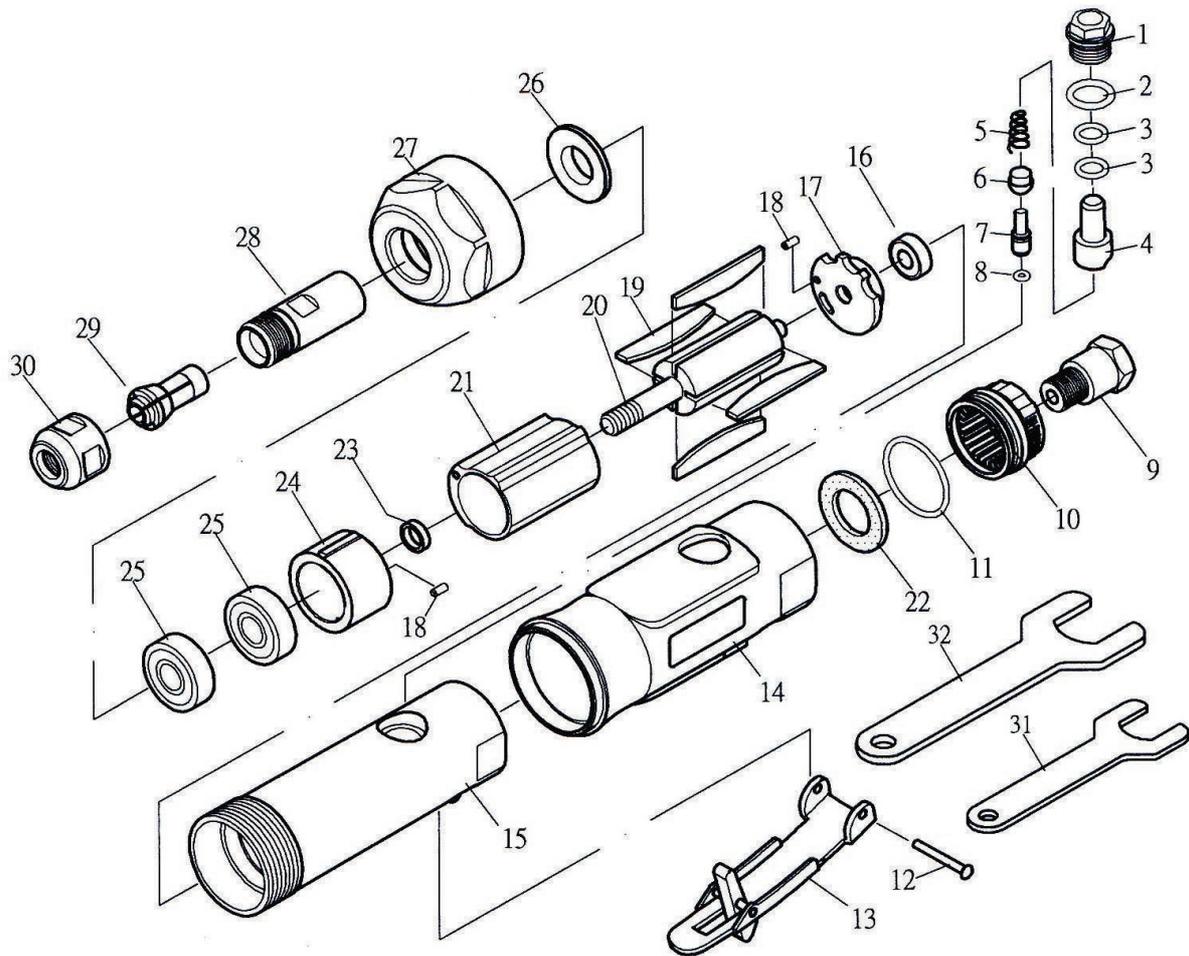

Part No.	Order No.	Description	Qty
01	TJZ683	SCREW	1
02	TJZ696	O-RING (P12)	1
03	TJZ697	O-RING (P8)	2
04	TJZ684	AIR REGULATOR	1
05	TJZ653	SPRING	1
06	TJZ654	VALVE STEM BUSHING	1
07	TJZ685	VALVE STEM	1
08	TJZ656	O-RING	1
09	TJZ657	AIR INLET	1
10	TJZ686	EXHAUST SLEEVE	1
11	TJZ687	O-RING	1
12	TJZ660	SPRING PIN	1
13	TJZ661	LEVER	1
14	TJZ688	PROTECTING RUBBER	1
15	TJZ689	HOUSING	1
16	TJZ664	BEARING (696ZZ)	1

Part No.	Order No.	Description	Qty
17	TJZ690	REAR PLATE	1
18	TJZ691	PIN (2*6)	2
19	TJZ692	ROTOR BLADE	4
20	TJZ693	ROTOR	1
21	TJZ694	CYLINDER	1
22	TJZ695	CONE MUFFLER	1
23	TJZ696	BEARING SPACER	1
24	TJZ697	FRONT PLATE	1
25	TJZ698	BEARING (608ZZ)	2
26	TJZ699	WASHER	1
27	TJZ700	CLAMP NUT	1
28	TJZ701	SPINDLE	1
29	TJZ702	COLLET	1
30	TJZ703	COLLET NUT	1
31	TJZ681	STOP SPANNER 14MM	1
32	TJZ704	STOP SPANNER 19MM	1

Air supply Requirements

Supply tool with clean and dry air. Higher pressure drastically reduces tool life.
Air line should be equipped with an air filter and an air regulator adjusted to 90 Psi (6.2 bar).

Lubrication

Use an air line lubricator adjusted to two drops per minute. If an air line lubricator cannot be used, add 2 drops of air motor oil to the inlet every 8 hours of service.

Data

Sound Pressure Level of 83 dB(A)
Vibration is less than 0.1 m/s²

Maintenance

High wear parts are underlined in the part list.
All torque figures \pm 10%.